


Removing CDS Deck Tiles From Balconies For Inspections or Remedial Repairs

Begin by creating a diagram of the deck area. Then number all the deck tiles that have been cut (be sure to keep in sequence as seen in the diagram below).


After completing and numbering the diagram repeat this same process on the actual deck tiles (placing tape and marking the tiles). The full tiles do not need to be be numbered and will fit in any of the other locations provided the loops and tabs are going in the proper direction (Loops Right and Bottom See Image Below).

When removing Weatherstone or Ipe tiles it is recommended to remove in 2 x 2 panels to keep the same pattern. Carpet tiles may be removed in 3 x 3 panels because the carpet pattern goes in the same direction and the tiles are much lighter in weight. Remember when stacking the panels be sure to have the loops to the right and bottom for ease of installation.

Weatherstone and Ipe Deck Tiles

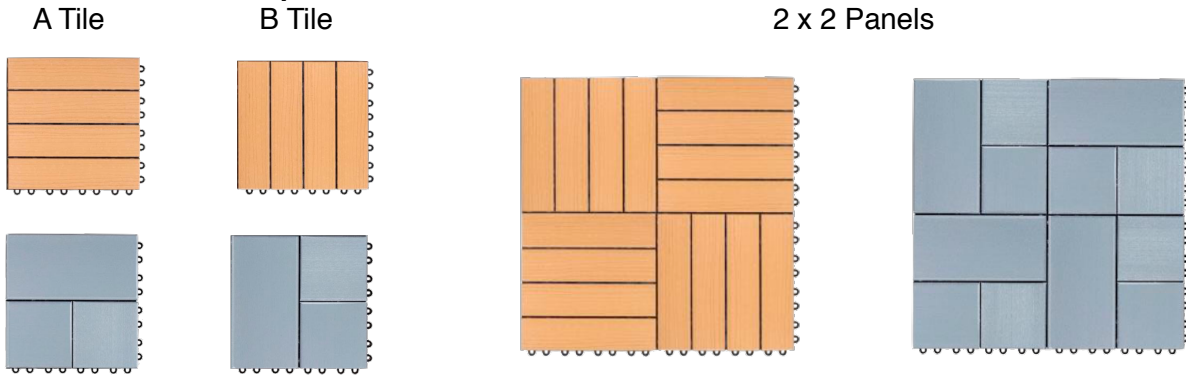

Carpet Tile

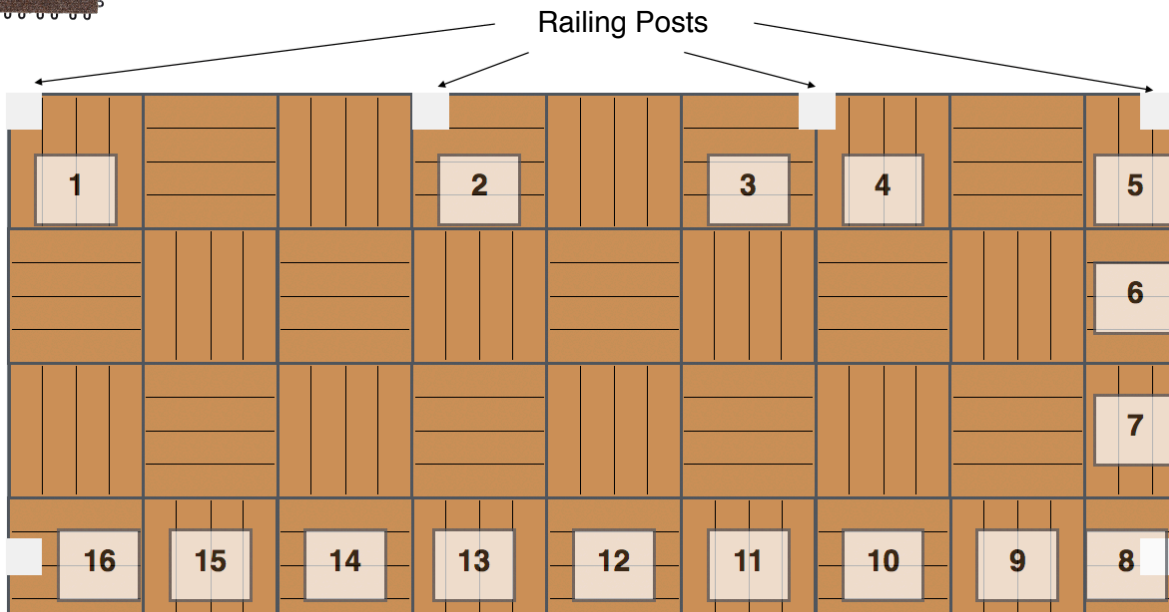

Balcony Diagram